

## RFID Lock User Manual

I. Clearance the Lock to default: Use the mechanical key continuous unlock 5 times, and long Beep will sound, and the Lock is clear to the default.

II. Setup Master Card: The lock at the clear status, the First card Swipe the lock is the Master Card. The Master Card is used to set up Opening Card, and can open the door directly.

III. Setup Opening Card: Swipe the Master Card at the Induction Area, and swipe the Opening Card within 5 Seconds, a short beep will sound after success. Can setup 200 opening card continuously, and stop swipe opening card after 5 Seconds or swipe the Master Card again, exit the setup condition. If Swip the exist opening card, 2 short beep will sound.

IV. Open the Door: Use the Master Card Or Opening Card to Open the door directly.

V. Clear Single Opening Card: Use the Master Card to swipe Lock continuously with 4 times, then swipe that Single card which want to delete.